

 
 
Futaba

S-U400

universal servo

S.BUS2

S-U400		at 6.6V	at 7.4V	SIZE	40.0x20.0x38.1 [mm] 1.57x0.79x1.50 [in]
SPEED	(s/60°)	0.14	0.13	WEIGHT	39 [g]
TORQUE	(kgf · cm)	7.1	7.9	RATED VOLTAGE	6.0~7.4 [V]
	(ozf · in)	98.6	109.7	OPERATING VOLTAGE	4.8~8.4 [V]

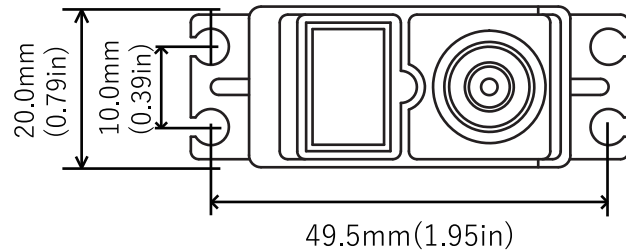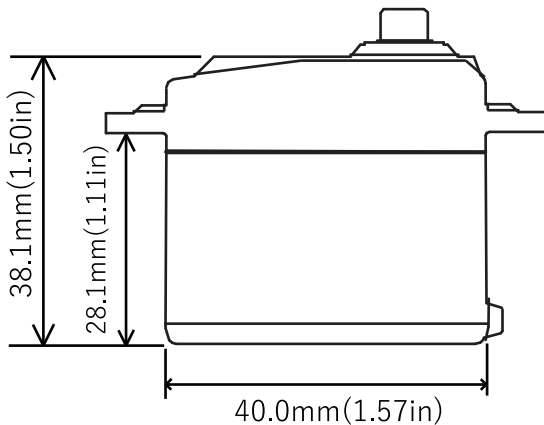

WARNING

⚠ Turn on the power in transmitter → receiver order. In addition, always check the operation of all the servos before use.

⚠ Do not leave the servo in the locked state. Leaving the servo in the locked state may cause smoke, fire, and damage.

⚠ Never connect the battery in reverse. Reverse connection may cause smoke, fire, and damage.

⚠ Do not touch the servo case immediately after servo operation. You may be burned because the motor and circuits inside the servo become hot.

⚠ Use the servo as an actuator in hobby applications. Futaba will not be responsible if the servo is used in applications other than the above.

⚠ Futaba will not be responsible for damage, etc. caused by the use of parts other than Genuine Futaba parts.